


## INSTALLATION INSTRUCTIONS

APPLICATION: GenX Step Pad Replacement Kit APP PART #: 20-0001


AUTOMOTIVE PRODUCTS, INC.

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	STEP PAD	5MM ALLEN KEY
2	2	M6 FLAT HEAD SOCKET CAP SCREW	PRY TOOL
3	2	M6 KEPS NUT	10MM WRENCH
4	2	DOUBLE SIDED TAPE	

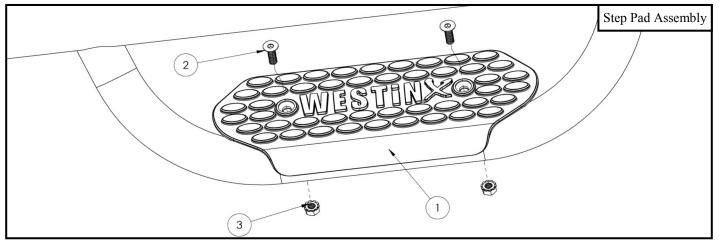

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING .


- 1. Remove contents from box, verify if all parts listed are present and undamaged. Carefully read and understand all instructions before attempting installation. Failure to identify damage before installation could lead to a rejection of any claim.
- 2. Remove the old step pad with the appropriate tools.
- 3. Scrape off any excess glue residue left behind by step pad to ensure that the new double sided tape will stick properly.
- 4. Align the step pad with the step bar holes and loosely secure it with the provided hardware. See Step Pad Assembly.
- 5. Gently lift up the tab and apply the provided double sided tape to the step pad. See Figure 1 for location.
- 6. Tighten and secure the step pad onto step bar.
- 7. Repeat for any other step pad location.

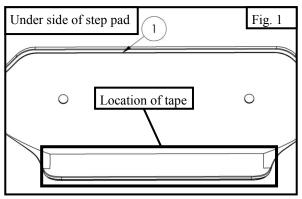


1



Westin Automotive Products, Inc. 320WCovina Blvd San Dimas, Ca. 91773 Thank you for choosing Westin products for additional installation assistance please call Customer Service (800) 793-7846 www.westinautomotive.com

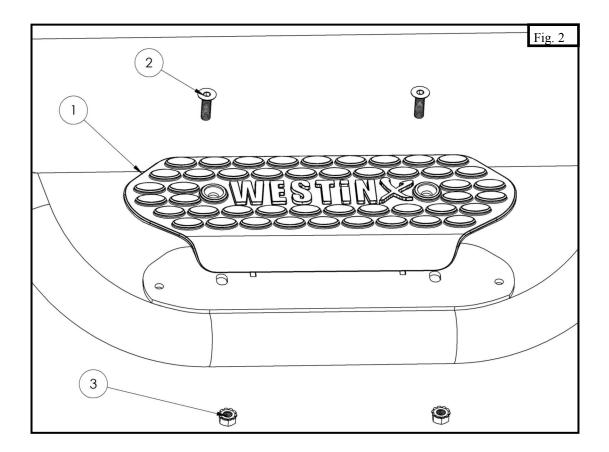

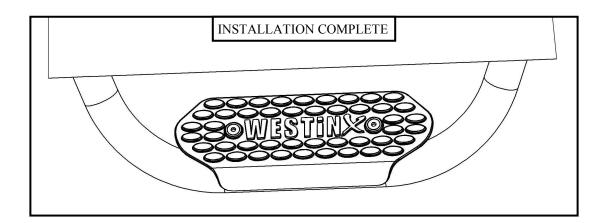

## CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POL-ISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc. 320WCovina Blvd San Dimas, Ca. 91773 Thank you for choosing Westin products for additional installation assistance please call Customer Service (800) 793-7846 www.westinautomotive.com