INSTALLATION INSTRUCTIONS






APPLICATION:

2014-2018 Chevrolet Silverado 1500

PART NUMBER: 58-81005H

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	RECIEVER HITCH	19MM SOCKET
2	4	M12 HEX HEAD BOLT (BLACK ZINC)	RATCHET
3	8	M12 FLAT WASHER (BLACK ZINC)	TORQUE WRENCH
4	4	M12 SPLIT LOCK WASHER (BLACK ZINC)	19MM WRENCH
5	4	M12 HEX NUT (BLACK ZINC)	22MM SOCKET
6	2	M14 HEX HEAD BOLT (BLACK ZINC)	
7	2	M14 FLAT WASHER (BLACK ZINC)	
8	2	M14 SPLIT LOCK WASHER (BLACK ZINC)	

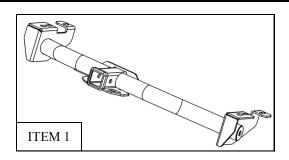


ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING


PROCEDURE

- 1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
 - Failure to identify damage before installation could lead to a rejection of any claim.
- 2. Disconnect license plate lights, trailer connector and park assist sensors so that bumper assembly can be removed.
- Remove the four bolts indicated in Figure
 1 from the driver's side frame bracket.


 Repeat on passenger's side.


Note: This hitch is only compatible with the Outlaw Bumper. It will not fit the OEM bumper.

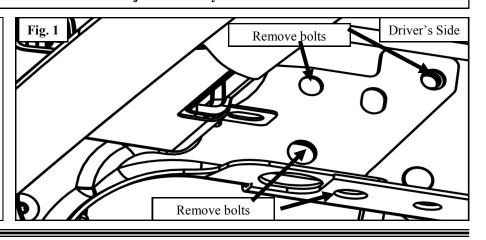


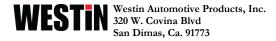


4. In order to remove the stock bumper, three bolts on each side of the vehicle holding the bed to the frame must be loosened and the bed must be lifted slightly. **Figures 2-4** show the locations of these three bolts on the driver's side. *Note*: Do not remove these bolts. Only loosen them

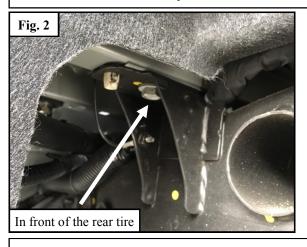


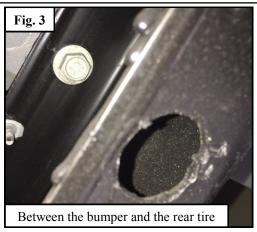

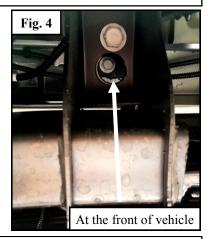



- 5. Remove stock bumper
- 6. Loosely install the receiver hitch (1) using the supplied M12 hardware (2-5) according to Figures 5 & 6.
- 7. Tighten all M12 hardware to 50-55 ft-lbs and M14 hardware to 70-75lbs.

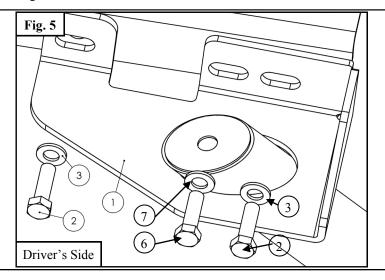

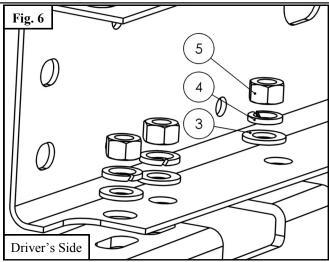

INSTALLATION COMPLETE

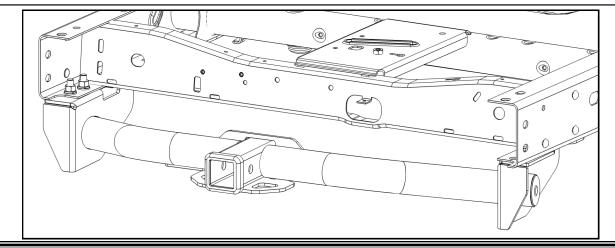

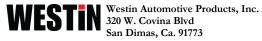

2



WARNINGS & NOTICES FOR THE INSTALLATION OF WESTIN TOWING PRODUCTS - CLASS III RECEIVER HITCH

NOTICE

Westin Receiver Hitches are designed to accommodate a 2"- square receiver draw bar rated for class III/IV towing. Closely follow all Westin Installation Instructions for the proper installation of product. Improper installation can result in death, serious injury, and/or product and vehicle damage. In the operation of these products, it is imperative to observe precautions for your personal safety and the safety of others.



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.

DRILLING:


Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY:

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.

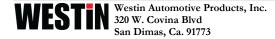

3